


Quick Start

1. Press Power 

2. Press Play 

3. Enjoy!

We recommend that you fully charge the video player before using (approx. 4 hours or until entire battery icon turns green). Use the AC Adaptor included to charge through any standard wall outlet. One full charge should provide up to 8 hours of play time.

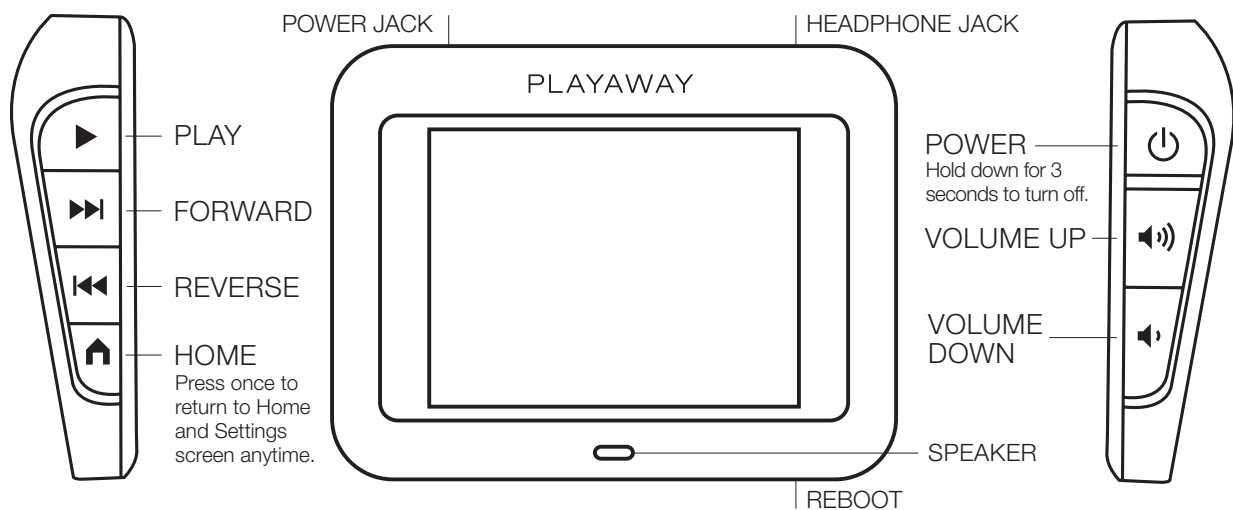

▶ Play/Pause/Select

Press once to Select or Play, press again to Pause while playing.

▶▶ Forward/Skip

Press once to Skip to the next video or menu item above. Hold down to Skip ahead within the current video.

◀◀ Reverse/Back

Press once to go to the previous video or menu item below. Hold down to go Back within the current video.

Reboot:

Insert a paper clip into the hole at the bottom of the player to Reboot. Press Power to turn the player back on.

Lock/Unlock:

 + 

Press the buttons at the same time to Lock or Unlock the player.